



PPP

Part Number	D119-646-213	Box Part Number	BX104	L x W x H	190 x 13 x 7
Description	Float Skidtube w/ Training Wearplates, LH	Box Part Number	BX21	Dimension	30.5 x 8
		Other Packaging	MF6812		MF166
		Logo Decals	D2728-1		

### Packaging Instructions and Decal Placement

#### D119-646-213

Apply labels D2729-4 and D2728-1 as per drawing.

Wrap float skidtube in plastic bag. Take the MF6812 and cut 1/4 inch off one side only. Place 2 wedges inside box. Place (4) pieces of MF6812 at the bottom of the box and (2) pieces of MF166 at each ends of the box.


Place float skidtube in the box. Apply 2" of tri-beam foam on top to correspond with bottom foam already in place.

Put hardware in box 21. Place the box and the paperwork with the float skidtube and close box.

Add in two pieces of edge board to inside top of skidtube box. Apply Dart tape. Apply strapping after first Dart logo, thereafter applying strapping after every second Dart logo. Add four pieces


of edge board, one per angle of box. Staple ends. Tie wrap over top again. Apply clear tape over strapping.

Put (4) wedges on outside of box. Apply tape over wedges. Apply label D2729-3 as per instructions in QSI 014.

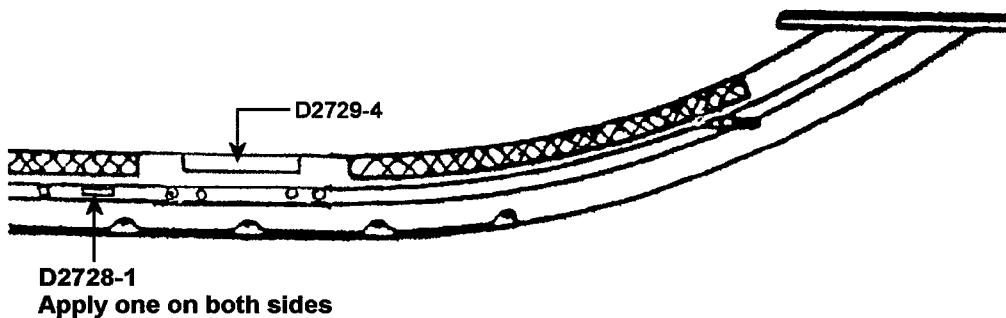

D2729-4

D2729-3

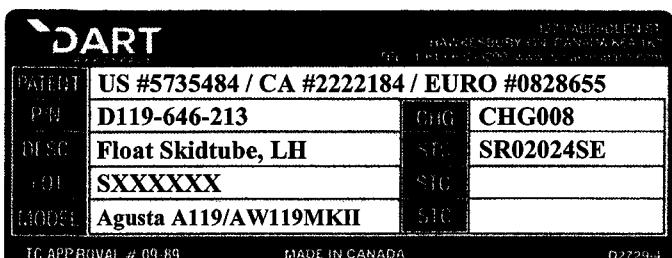

DAS  
55  
9-89  
NOV 01 2019



Revision: J  
Date: 19.10.16